




IMPRESSA Z9 One Touch TFT – Quick Reference Guide

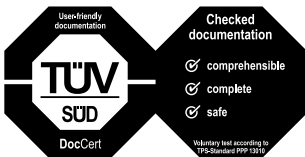

The 'IMPRESSA Z9 One Touch TFT Instructions for Use' together with these short instructions 'IMPRESSA Z9 One Touch TFT – Quick Reference Guide' has been awarded the seal of approval by the independent German Technical Inspection Agency, TÜV SÜD, due to its easy-to-understand style, its thoroughness and coverage of safety aspects.


IMPRESSA Z9 One Touch TFT – Quick Reference Guide




These short instructions do not replace the 'IMPRESSA Z9 One Touch TFT Instructions for Use'. Make sure you read and observe the safety information and warnings first in order to avoid hazards.

Rinsing the machine

You can initiate the rinse operation manually at any time.

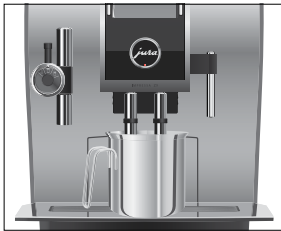

Precondition: 'Please select product:' is displayed.


- ▶ Place a receptacle under the coffee spout.
- P** ▶ Press the P button.
'Maintenance status (1/7)'
-  ▶ Turn the Rotary Switch until the programme item 'Maintenance status (2/7)' is displayed.
- ▶ Press the 'Rinse the coffee system' button.
'Machine is rinsing.', water flows out of the coffee spout.
The rinse stops automatically. 'Please select product:' appears on the display.

Rinsing the cappuccino frother

After each milk preparation, the IMPRESSA prompts you to rinse the milk system.



Precondition: 'Rinse the milk system.' is displayed and the Rotary Switch lights up.

- ▶ Place a receptacle under the cappuccino frother.
-  ▶ Press the Rotary Switch.
'Milk system is being rinsed.', the cappuccino frother is rinsed.
The rinse stops automatically. 'Please select product:' appears on the display.

Cleaning the cappuccino frother

To ensure that the cappuccino frother always works properly, you must clean it **daily** when you have been preparing milk. Your IMPRESSA will **not** prompt you to clean the cappuccino frother.

CAUTION If the wrong cleaning agent is used, the machine could be damaged and/or traces could be left behind in the water.

- ▶ Use only original JURA maintenance products.

i JURA Cappuccino Cleaner is available from specialised dealers.

Precondition: 'Please select product:' is displayed.

P ▶ Press the P button.

'Maintenance status (1/7)'

▶ Press the 'Clean the milk system' button.

'Approximate duration 2 min.'

▶ Press the 'Start' button.



'Use only original JURA maintenance products!'

▶ Press the 'Start' button again.

'Cleaning agent for milk system.'

▶ Pour 250 ml of fresh water into a receptacle and add one capful of Cappuccino Cleaner.

▶ Immerse the milk pipe in the receptacle.

▶ Turn the setting wheel of the cappuccino frother to the Milk Foam  or Milk  position.

▶ Place another receptacle under the cappuccino frother.

▶ Press the 'Next' button.

'Milk system is being cleaned.', the cappuccino frother and the milk pipe are cleaned.

'Water for cleaning milk system.'

▶ Rinse the receptacle thoroughly, fill it with 250 ml of fresh water and immerse the milk pipe in the water.

▶ Empty the other receptacle and place it under the cappuccino frother again.

▶ Press the 'Next' button.

'Milk system is being cleaned.', the cappuccino frother and the milk pipe are rinsed with fresh water.

The operation stops automatically. 'Please select product:' appears on the display.



Dismantling and rinsing the cappuccino frother



To make sure the cappuccino frother works properly, and in the interests of hygiene, it must be dismantled and rinsed **daily** if you have been preparing milk. Your IMPRESSA will not prompt you to dismantle and rinse the frother.

- ▶ Remove the milk pipe and rinse it thoroughly under running water.
- ▶ Carefully pull the cappuccino frother down and off.
- ▶ Dismantle the cappuccino frother into its individual parts.
- ▶ Rinse all parts of the cappuccino frother thoroughly under running water. If there are severely dried-on milk residues, firstly immerse the individual parts in JURA Cappuccino Cleaner and then rinse them thoroughly.
- ▶ Reassemble the cappuccino frother.


- i** Ensure that all individual parts are correctly and firmly connected to ensure correct operation of the cappuccino frother.
- ▶ Firmly attach the frother to the connector.

Inserting and activating the filter

Your IMPRESSA no longer has to be descaled if you are using the CLARIS Blue filter cartridge. If you did not activate the filter cartridge the first time you used the machine, you can do this now as follows.

- i** Perform the ‘inserting the filter’ operation without any interruptions. This will ensure that your IMPRESSA always produces its best.

Precondition: ‘Please select product:’ is displayed.

- P** ▶ Press the P button.
‘Maintenance status (1/7)’
-  ▶ Turn the Rotary Switch until the programme item ‘Maintenance settings (6/7)’ is displayed.
- ▶ Press the ‘Filter’ button.
‘Use filter’
- ▶ Press the ‘Active’ button.
- ▶ Press the ‘Save’ button.
‘Saved’ appears briefly on the display.
‘Insert filter.’
- ▶ Remove and empty the water tank.
- ▶ Remove the filter cartridge extension from the Welcome Pack.




- ▶ Fit the filter extension on top of a CLARIS Blue filter cartridge.
- ▶ Open the filter holder and insert the filter cartridge into the water tank, exerting slight pressure.
- ▶ Close the filter holder. It will click into place audibly.

i After two months, the filter will cease to work. Set the date on the date plate on the filter holder in the water tank.

- ▶ Fill the water tank with fresh, cold water and reinsert the tank.
- ▶ Place a receptacle (at least 500 ml) under the cappuccino frother.
- ▶ Press the 'Next' button.

'Filter is being rinsed.', water flows out of the cappuccino frother.

i You can interrupt rinsing of the filter at any time by pressing any button. Press the Rotary Switch  to continue rinsing of the filter.

i The water may be slightly discoloured. This is not harmful to health and does not affect the taste.

Rinsing of the filter stops automatically after approximately 500 ml.

'Please select product:' appears on the display. The filter is now activated.

Changing the filter

i After 50 litres of water have flowed through, the filter will cease to work. Your IMPRESSA will automatically prompt you to change the filter.

i After two months, the filter will cease to work. Set the date on the date plate on the filter holder in the water tank.

i If the CLARIS Blue filter cartridge is not activated in programming mode, you will not be prompted to change the filter.

i CLARIS filter cartridges are available from specialised dealers.

Precondition: 'Change the filter' is displayed and the P button lights up.

P ▶ Press the P button.

'Maintenance status (1/7)'


- ▶ Press the 'Change the filter' button.
'Approximate duration 2 min.'
- ▶ Press the 'Start' button.
'Use only original JURA maintenance products!'
- ▶ Press the 'Start' button again.
'Change filter.'
- ▶ Remove and empty the water tank.
- ▶ Open the filter holder and remove the old CLARIS Blue filter cartridge.
- ▶ Fit the filter extension on top of a **new** filter cartridge.
- ▶ Insert the new filter cartridge into the water tank, exerting slight pressure.
- ▶ Close the filter holder. It will click into place audibly.



i After two months, the filter will cease to work. Set the date on the date plate on the filter holder in the water tank.

- ▶ Fill the water tank with fresh, cold water and reinsert the tank.
- ▶ Place a receptacle (at least 500 ml) under the cappuccino frother.
- ▶ Press the 'Next' button.
'Filter is being rinsed.', water flows out of the cappuccino frother.



i You can interrupt rinsing of the filter at any time by pressing any button. Press the Rotary Switch  to continue rinsing of the filter.

i The water may be slightly discoloured. This is not harmful to health and does not affect the taste.

Rinsing of the filter stops automatically after approximately 500 ml.

'Please select product:' appears on the display.

Cleaning the machine

After 220 preparations or 80 switch-on rinses, the IMPRESSA will prompt you to clean it.



CAUTION


If the wrong cleaning agent is used, the machine could be damaged and/or traces could be left behind in the water.

- ▶ Use only original JURA maintenance products.

- i** The cleaning programme lasts approximately 20 minutes.
- i** Do not interrupt the cleaning programme. The quality of cleaning will be impaired if you do so.
- i** JURA cleaning tablets are available from specialised dealers.

Precondition: 'Clean machine.' is displayed and the P button lights up.

- P**
- ▶ Press the P button.
'Maintenance status (1/7)'
 - ▶ Press the 'Clean' button.
'Approximate duration 20 min.'
 - ▶ Press the 'Start' button.
'Use only original JURA maintenance products!'
 - ▶ Press the 'Start' button again.
'Empty coffee grounds container.'
 - ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
'Press the Rotary Switch.', the Rotary Switch lights up.
 - ▶ Place one receptacle under the coffee spout and another under the cappuccino frother.
 -  ▶ Press the Rotary Switch.
'Machine is being cleaned.', water flows out of the coffee spout.
The operation is interrupted, 'Add cleaning tablet.'
 - ▶ Open the cover of the filler funnel for ground coffee.
 - ▶ Insert a JURA cleaning tablet into the filler funnel.
 - ▶ Close the cover of the filler funnel.
'Press the Rotary Switch.', the Rotary Switch lights up.
 -  ▶ Press the Rotary Switch.
'Machine is being cleaned.', water flows repeatedly out of the coffee spout and the cappuccino frother.
The operation is interrupted, 'Empty coffee grounds container.'
 - ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
'Please select product:' appears on the display. Cleaning is now complete. Your IMPRESSA is once more ready for use.

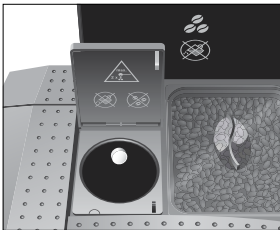

Descaling the machine

The IMPRESSA builds up deposits of limescale over time and automatically prompts you to descale it when necessary. The degree of calcification depends on the hardness of your water.

⚠ CAUTION

If the descaling agent comes into contact with the skin or eyes, this can cause irritation.

- ▶ Avoid contact with the skin or eyes.
 - ▶ Rinse off the descaling agent with clean water. Should you get any descaling agent in your eye, see a doctor.
-

CAUTION

If the wrong descaling agent is used, the machine could be damaged and/or traces could be left behind in the water.

- ▶ Use only original JURA maintenance products.
-

CAUTION

If the descaling operation is interrupted, there may be damage to the machine.

- ▶ Allow the descaling programme to run to the end.
-

CAUTION

If the descaling agent comes into contact with sensitive surfaces (e.g. marble), damage cannot be ruled out.



- ▶ Clean up any splashes immediately.
-

- i** The descaling programme lasts approximately 45 minutes.
- i** JURA descaling tablets are available from specialised dealers.
- i** If you use a CLARIS Blue filter cartridge and this is activated, you will not be prompted to descale.

Precondition: ‘Decalcify machine.’ is displayed and the P button lights up.

P

- ▶ Press the P button.
‘Maintenance status (1/7)’
- ▶ Press the ‘Descal’ button.
‘Approximate duration 45 min.’
- ▶ Press the ‘Start’ button.
‘Use only original JURA maintenance products!’
- ▶ Press the ‘Start’ button again.
‘Empty drip tray.’
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
‘Pour descaling agent into water tank.’
- ▶ Remove and empty the water tank.

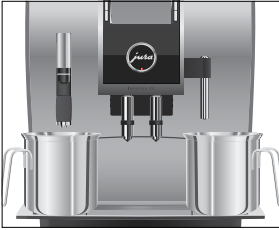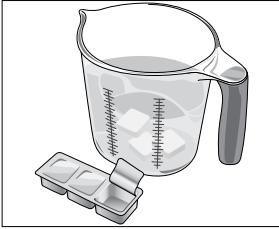

- ▶ Completely dissolve the contents of one blister (3 JURA descaling tablets) in a receptacle holding 600 ml of water. This may take several minutes.
- ▶ Pour the solution into the empty water tank and insert it into the machine.

‘Press the Rotary Switch.’, the Rotary Switch lights up.

- ▶ Carefully pull the cappuccino frother down and off.
- ▶ Place one receptacle under the connector of the cappuccino frother and another under the hot-water spout.



- ▶ Press the Rotary Switch.

‘Machine is being descaled.’, water flows repeatedly out of the connector of the cappuccino frother and the hot-water spout.

The operation is interrupted, ‘Empty drip tray.’.

- ▶ Empty both receptacles.
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.

‘Fill water tank.’

- ▶ Remove the water tank and rinse it thoroughly.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.

‘Press the Rotary Switch.’, the Rotary Switch lights up.

- ▶ Firmly attach the frother to the connector.

- ▶ Place a receptacle under the cappuccino frother, the coffee spout and the hot-water spout.



- ▶ Press the Rotary Switch.

‘Machine is being descaled.’, water flows out of the hot-water spout and the cappuccino frother.

‘Machine is heating.’

‘Machine is rinsing.’, water flows out of the coffee spout.

The operation stops automatically, ‘Empty drip tray.’.

- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.

‘Please select product.’ appears on the display. Descaling is now complete. Your IMPRESSA is once more ready for use.

- i** If the descaling operation stops unexpectedly, rinse the water tank thoroughly.