

jura®



Z8 – Quick Reference Guide

Z8 – Quick Reference Guide



These short instructions do not replace the 'Z8 Instructions for Use'. Make sure you read and observe the safety information and warnings first in order to avoid hazards.

Rinsing the machine



You can initiate the rinse operation manually at any time.

Precondition: The start screen is displayed.

- ▶ Place a receptacle under the dual spout.
- ▶ Touch 'P'.
- ▶ 'Machine settings'
- ▶ Move your finger across the display until 'Maintenance status' is displayed in the centre.
- ▶ Touch 'Maintenance status'.
- ▶ 'Clean the milk system'
- ▶ Move your finger across the display until 'Rinse' is displayed in the centre.
- ▶ Touch 'Rinse' to start the rinse operation.
- ▶ 'Machine is rinsing', 'Milk system is being rinsed', water flows out of the dual spout.
- ▶ The rinse stops automatically. The start screen is displayed.

Automatic milk system rinsing

15 minutes after milk preparation, the milk system is **automatically** rinsed. Therefore always place a receptacle under the dual spout after preparing milk.

Cleaning the milk system

To ensure that the milk system in the dual spout always works properly, you must clean it **daily** when you have been preparing milk.

CAUTION


If the wrong cleaning agent is used, the machine could be damaged and/or traces could be left behind in the water.

- ▶ Use only original JURA maintenance products.

-
- i** JURA milk system cleaner is available from specialised dealers.
 - i** To clean the milk system, use the container supplied.

Precondition: The start screen is displayed. 'Clean the milk system' is displayed.

- ▶ Touch 'Clean the milk system'.
- ▶ Touch 'Clean the milk system' again.
- ▶ Touch 'Start'.
- ▶ Touch 'Start' again.
- ▶ 'Milk system cleaner' / 'Connect the milk tube'
- ▶ Remove the milk pipe from the milk container.
- ▶ Add 1 capful of milk system cleaner to the outer, rectangular part of the container.

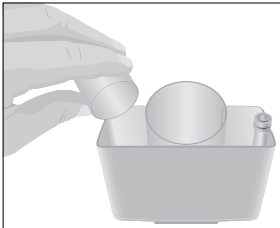



- ▶ Place the container under the dual spout and connect the milk pipe with the container.
- i** To connect the milk pipe to the container correctly, the pipe must be fitted with a connector.
- ▶ Slide the dual spout down to fix the container in place.
- ▶ Touch 'Next'.
- ▶ 'Milk system is being cleaned', the dual spout and the pipe are cleaned.
- ▶ The operation stops automatically. 'Milk system cleaning complete' appears briefly on the display.
- ▶ The start screen is displayed.

Dismantling and rinsing the dual spout


The dual spout must be dismantled and rinsed **daily** if milk has been prepared to make sure it functions perfectly and also in the interests of hygiene.

- ▶ Remove the milk pipe and rinse it thoroughly under running water.

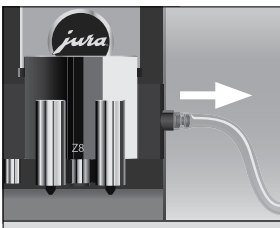


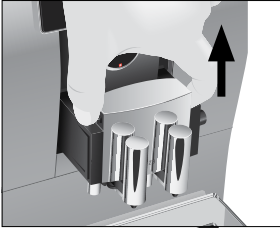


- ▶ Press the releasing devices and pull the cover of the dual spout up and off.

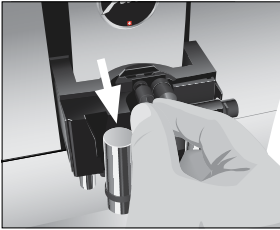


- ▶ Remove the milk system from the dual spout.

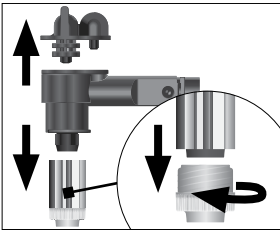


- ▶ Dismantle the milk system into its individual parts.
- ▶ Rinse all the parts under running water. If there are severely dried-on milk residues, firstly immerse the individual parts in a solution of 250 ml cold water and 1 capful of JURA milk system cleaner. Then rinse the parts thoroughly.

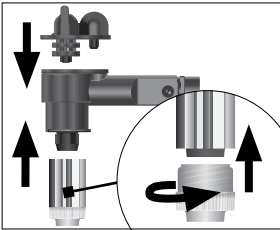


- ▶ Reassemble the milk system.

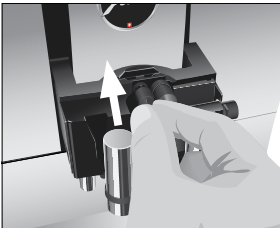

- ▶ Fit the assembled individual parts back in the dual spout and press it firmly.

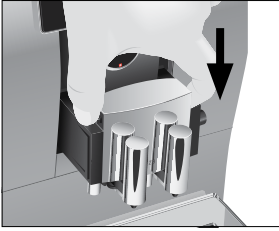

- ▶ Fit the cover of the dual spout. Make sure the cover of the dual spout is correctly fitted.

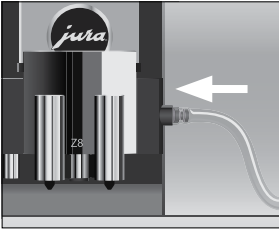


- ▶ Connect the milk pipe to the dual spout.

Inserting the filter

Your Z8 no longer has to be descaled if you are using the CLARIS Smart filter cartridge. If you did not insert the filter cartridge the first time you used the machine, you can do this now as follows.

Precondition: The start screen is displayed.

- ▶ Remove and empty the water tank.
- ▶ Fit the filter cartridge extension supplied on top of a CLARIS Smart filter cartridge .
- ▶ Insert the filter cartridge with its extension into the water tank.
- ▶ Turn the filter cartridge clockwise until it audibly clicks into place.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.

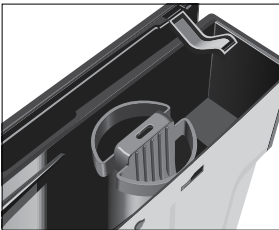

- i** The machine automatically detects that you have just inserted the filter cartridge.

‘Filter operation’ / ‘Saved’

‘Filter is being rinsed’, the filter is rinsed. The water flows directly into the drip tray.

‘Empty drip tray’


- ▶ Empty the drip tray and put it back into the machine.
'Filter operation' / 'Filter rinsing complete'
The start screen is displayed. Your Z8 is once more ready for use.

Changing the filter

- i** Once the filter cartridge stops working (depending on the water hardness setting), the Z8 will prompt you to change the filter.
- i** CLARIS Smart filter cartridges are available from specialised dealers.

Precondition: The start screen is displayed. **'Change the filter'** is displayed.

- ▶ Remove and empty the water tank.
- ▶ Turn the filter cartridge anti-clockwise and remove it along with the extension from the water tank.
- ▶ Fit the filter cartridge extension on top of a **new** CLARIS Smart filter cartridge.
- ▶ Insert the filter cartridge with its extension into the water tank.
- ▶ Turn the filter cartridge clockwise until it audibly clicks into place.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.

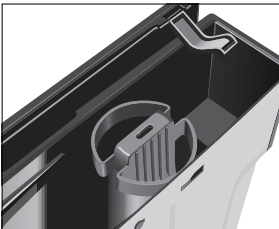

- i** The machine automatically detects that you have just changed the filter cartridge.

'Filter operation' / 'Saved'

'Filter is being rinsed', the filter is rinsed. The water flows directly into the drip tray.

'Empty drip tray'

- ▶ Empty the drip tray and put it back into the machine.
'Filter operation' / 'Filter rinsing complete'
The start screen is displayed. Your Z8 is once more ready for use.

Cleaning the machine

After 180 preparations or 80 switch-on rinses, the Z8 will prompt you to clean it.

CAUTION

If the wrong cleaning agent is used, the machine could be damaged and/or traces could be left behind in the water.

- ▶ Use only original JURA maintenance products.

- ❗ The cleaning programme lasts approximately 20 minutes.
- ❗ Do not interrupt the cleaning programme. The quality of cleaning will be impaired if you do so.
- ❗ JURA cleaning tablets are available from specialised dealers.

Precondition: The start screen is displayed. 'Clean machine' is displayed.

- ▶ Touch 'Clean machine'.
- ▶ Touch 'Clean'.
- ▶ Touch 'Start'.
- ▶ Touch 'Start' again.
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
- ▶ Place a receptacle under the dual spout.
- ▶ Press the Rotary Switch.
- ▶ Open the cover of the filler funnel for ground coffee.



- ▶ Insert a JURA cleaning tablet into the filler funnel.
- ▶ Close the cover of the filler funnel.
- ▶ Press the Rotary Switch.
- ▶ Press the Rotary Switch.
- ▶ The operation stops automatically.
- ▶ Empty coffee grounds container'

- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
Cleaning is now complete. The start screen is displayed.

Descaling the machine

The Z8 builds up deposits of limescale over time and automatically prompts you to descale it when necessary. The degree of calcification depends on the hardness of your water.

- i** If you are using a CLARIS Smart filter cartridge, you will not be prompted to descale.

-
- ⚠ CAUTION** If the descaling agent comes into contact with the skin or eyes, this can cause irritation.
- ▶ Avoid contact with the skin or eyes.
 - ▶ Rinse off the descaling agent with clean water. Should you get any descaling agent in your eye, see a doctor.

-
- CAUTION** If the wrong descaling agent is used, the machine could be damaged and/or traces could be left behind in the water.
- ▶ Use only original JURA maintenance products.


-
- CAUTION** If the descaling operation is interrupted, there may be damage to the machine.
- ▶ Allow the descaling programme to run to the end.

-
- CAUTION** If the descaling agent comes into contact with sensitive surfaces (e.g. marble), damage cannot be ruled out.
- ▶ Clean up any splashes immediately.

-
- i** The descaling programme lasts approximately 45 minutes.
 - i** JURA descaling tablets are available from specialised dealers.

Precondition: The start screen is displayed. **'Decalcify machine'** is displayed.

- ▶ Touch **'Decalcify machine'**.
'Descale'
- ▶ Touch **'Descale'**.
- ▶ Touch **'Start'**.
- ▶ Touch **'Start'** again.
'Empty drip tray'

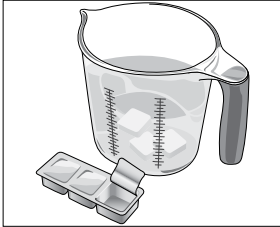

- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.

‘Pour descaling agent into water tank’

- ▶ Remove and empty the water tank.
- ▶ Completely dissolve 3 JURA descaling tablets in a receptacle holding 600 ml of water. This may take several minutes.
- ▶ Pour the solution into the **empty** water tank and insert it into the machine.

‘Press the Rotary Switch’

- ▶ Place a receptacle under the hot-water spout and dual spout.
- ▶ Press the Rotary Switch.

‘Machine is being descaled’, water flows straight into the drip tray and out of the hot-water nozzle and dual spout repeatedly.

The operation is interrupted, ‘Empty drip tray’.

- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.

‘Fill water tank’

- ▶ Empty the receptacle and place it under the hot water and dual spouts.

- ▶ Remove the water tank and rinse it thoroughly.

- ▶ Fill the water tank with fresh, cold water and reinsert the tank.

‘Press the Rotary Switch’

- ▶ Press the Rotary Switch.

‘Machine is being descaled’, the descaling operation is continued. Water flows straight into the drip tray and out of the hot-water nozzle and dual spout repeatedly.

‘Empty drip tray’

- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.

Descaling is now complete. The start screen is displayed.

- i** If the descaling operation stops unexpectedly, rinse the water tank thoroughly.

Z8 – Quick Reference Guide

Descaling the water tank


Limescale deposits may form in the water tank. To ensure correct function of the machine, descale the water tank from time to time.

- ▶ Remove the water tank.
- ▶ If you use a CLARIS Smart filter cartridge, remove this.
- ▶ Completely fill the water tank and dissolve 3 JURA descaling tablets in it.
- ▶ Leave the water tank with the descaling solution for several hours (e.g. overnight).
- ▶ Empty the water tank and rinse it thoroughly.
- ▶ If you use a CLARIS Smart filter cartridge, insert this again.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.

Cleaning the bean container

Coffee beans may be covered with a slight oil film which remains on the walls of the bean container. These traces may negatively affect the coffee result. For this reason clean the bean container from time to time.

Precondition: 'Fill bean container' is displayed.

- ▶ Switch the machine off with the On/Off button .
- ▶ Remove the aroma preservation cover.
- ▶ Clean the bean container with a soft, dry cloth.
- ▶ Fill the bean container with coffee beans and close the aroma preservation cover.