



jura[®]
Chrome Toaster

Operating instructions



Note

JURA Elektroapparate AG, CH-4626 Niederbuchsiten
Internet <http://www.jura.com>



Fig. 1



Fig. 2



Fig. 3



Fig. 4



Fig. 5

JURA Chrome Toaster for toasting two slices of bread at the same time.

Description

- 1 Main ON/OFF switch
- 2 Warning lamp – glows red when ON
- 3 Power cable with plug
- 4 Heat resistant handle for toast door
- 5 Case in chromium plated steel sheeting



Contents

JURA Chrome Toaster

1. Before using the toaster for the first time.....	page 6
2. How to use your JURA Chrome Toaster.....	page 6
3. Maintenance	page 6
4. Safety instructions.....	page 7
5. Technical specifications.....	page 7
6. Disposal.....	page 8
7. Legal information.....	page 8

Important information for the user

Congratulations on your choice of this top-quality JURA appliance and many thanks for the confidence you have shown in our products.

Your decision to purchase the JURA brand was a wise one and we wish you much pleasure with your new JURA appliance. Before using your new appliance, please read through these operating instructions carefully. They contain helpful practical information on how to get the most out of your appliance. And they explain how to use, clean and maintain it correctly. Should you have additional questions, please ask your local dealer or contact us direct.

1. Before using the toaster for the first time

- The toaster heats up when it is used. Choose a location for it that allows the heat to escape upwards without causing damage to anything nearby.
- The case of the toaster can become hot when the toaster is in use. Avoid touching the case with your bare fingers.
- Before plugging the toaster into the mains, ensure that your mains power corresponds with the details shown on the specification plate (on the bottom of the toaster).
- Only then should you plug in the toaster.

2. How to use your JURA Chrome Toaster

- Switch the toaster on by pressing the main switch (Fig. 1).
- The red warning lamp lights up to confirm that the toaster is switched on. The flat heating element starts to glow.
- Let the toaster warm up for about 30 seconds before putting a slice of bread in.

- Open the toast door (Fig. 2) using the heat-resistant handle.
- Put a slice of bread into the toaster. Use a square sliced loaf intended for toasting.
- If you use ordinary bread, it is better to cut off the crust before toasting. The crust tends to become slightly burnt.
- The bread should be sliced regularly and be no more than 1 cm in thickness. Avoid using bread that is too fresh as this tends to stick in the toaster.
- It is possible to toast two slices of bread at the same time (Fig. 3). This toaster has no automatic timer. The heating element browns one side of the bread first. You should keep an eye on the bread while it is toasting.
- As soon as the bread begins to steam strongly, the slice of bread must be turned over.
- To do this, quickly pull down the toast door. The slice of bread turns over (Fig. 4) automatically on to its untoasted side. Then close the door again.
- If the slice of bread does not turn over automatically, it must be turned by hand (Fig. 5). Take care not to burn yourself when doing this.
- You can toast the bread until it is just as brown as you like it. Never leave the toaster unattended when it is in use. Otherwise the bread will burn and have to be thrown away.

3. Maintenance

- Always switch the toaster off and pull the plug out of the power socket.
- Remove bread crumbs regularly. Simply turn the toaster upside down and shake it lightly over the sink.

- Never put the toaster in the dish-washer to clean it. Never place the toaster in water.
- Clean the toaster from the outside using a soft, damp cloth.
- When cleaning the toaster, never use sharp metal objects with corners that might damage it.
- Never use abrasive or corrosive cleansers.
- Always ensure that the toaster has cooled right down before putting it away.
- Always roll up the mains cable carefully to make sure that you do not damage it.

4. Safety instructions

- The toaster should only be used by adults who understand the operating instructions. Never allow children to use the toaster.
- People, including children, who do not have the physical, sensory or mental capabilities to use the machine safely or are inexperienced or lack knowledge in how to use the machine safely must be supervised by a responsible person when using it, or must be instructed in how to use it correctly.
- The toaster is connected to the power socket by a fixed cable. Ensure that no one trips over this cable. Keep children and pets away.
- Never leave the toaster unattended when it is in use. Even if you are only leaving the room for a short time, switch off the toaster and, to be on the safe side, also unplug it from the mains.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.

- The toaster is intended for normal domestic use. It should not be used for commercial purposes or for continuous operations.
- The toaster should only be repaired by an authorized JURA service centre.
- Please keep the original packaging for shipping or moving the toaster.
- Always place the toaster in a location where there is no risk of fire.
- Never put the appliance in a dish-washer to clean it. Never immerse the appliance in water either completely or partially.



Bread is liable to burn. Therefore, the appliance should never be used near or under curtains or other inflammable materials. You should always keep an eye on the appliance while it is in use

5. Technical specifications

Dimensions (WxHxD):	10 x 18.2 x 23 cm
Weight:	1.0 kg
Voltage:	230 V
Output:	500 W
Fixed cable:	1.5 m
Safety check:	

6. Disposal



Please dispose of old machines in an environmentally neutral way.

Old machines contain valuable materials capable of being recycled which should be salvaged for recycling. Please therefore dispose of old machines via suitable collection systems.

photocopying or translation into any language of these instructions without prior written authorization from JURA Elektroapparate AG is strictly prohibited.

7. Legal information

These operating instructions contain all the information necessary for the correct use, operation and maintenance of the toaster. Understanding and complying with the directions contained in these operating instructions are essential to ensure that the toaster is utilized without risk and to ensure safety during operation and maintenance. These operating instructions, however, cannot cover all the possible ways in which this toaster may be used. Should you require further information or should particular problems occur that are not dealt with in these operating instructions in sufficient detail for you, then please ask your local dealer for the information you require or contact us direct. We would further point out that the contents of these operating instructions in no way constitute a part of any previous or subsequent contract, agreement or legal relationship and in no way alter any such contract, agreement or legal relationship. All obligations on the part of JURA Elektroapparate AG result solely from the appropriate sales agreement which also contains full details of the only warranty terms valid in respect of this appliance. The contractual terms of this warranty are neither extended nor limited in any form by the information contained in these operating instructions. These operating instructions contain information that is protected by copyright. The



JURA Elektroapparate AG
Kaffeeweltstrasse 10
CH-4626 Niederbuchsiten

www.jura.com